


7540 & 7541 Spring Slider

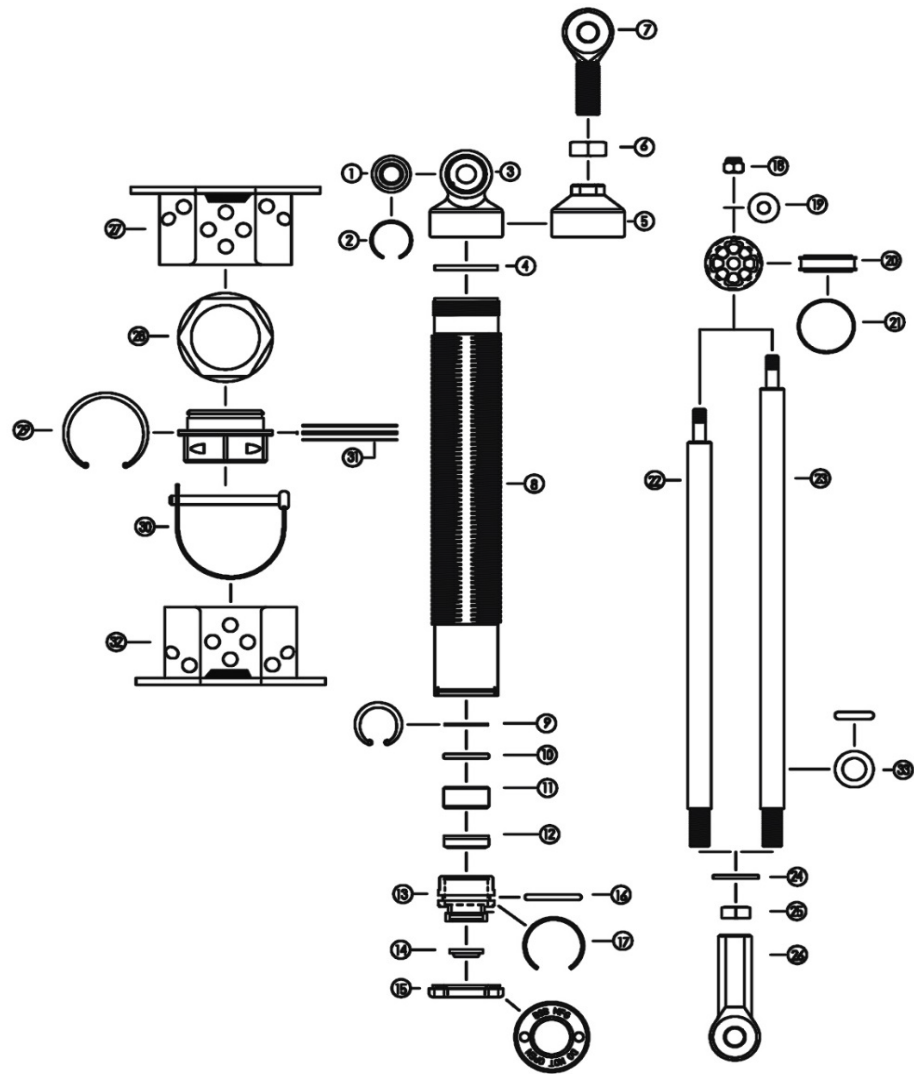

Number	Part Number	Name
1	20-9090-5-2	Com Ball
2	20-9090-5-3	Snap Ring
3	10-9090-22	End cap
4	12-9090-14-1	Square O-ring
5	7540-17	End cap
6	7523	Jam Nut
7	7522	Rod End male
8	7540-8	Body
9	7513	Snap Ring
10	7520	Washer
11	7509	Bearing
12	7508	Seal
13	7540-1	Gland Housing
14	7540-13	A.N. Wiper
15	7540-4	Threaded Ring
16	12-9090-2-9	Gland O-Ring
17	12-9090-3	Cir-Clip
18	20-9090-12	Lock Nut
19	20-9090-9	Washer
20	7540-7	Plunger
21	7540-14	Bearing
22	7540-5	Shaft (std)
23	7540-6	2" Longer Shaft
24	7524	Washer
25	7523	Jam Nut
26	7521	1/2 Rod End FM
27	7502	Cup (nut side)
28	7540-9	Adj. Nut
29	7540-11	Snap Ring
30	7515	Lynch Pin
31	7540-21	Bearing Thrust
32	7503	Cup (shaft)
33	7519	O-Ring (travel)



7540 & 7540-2 Spring Slider Instructions

- 1 Every 3 to 4 weeks remove the bottom end cap from threaded tube and flush TH XD slider with clean solvent.
- 2 Pull Shaft out, put clean oil on shaft and work shaft in and out to lube the seal.
- 3 Add 3 tablespoons of 30w Mobil 1 synthetic Motor oil, (**DO NOT USE GREASE, WD-40 OR ANTISEAZE TO SHAFT AS IT WILL CAUSE BEARING FAILURE.**) Install male rod end with Teflon tape on it to prevent leaking.

BSB MFG will rebuild / repair all XD sliders for the cost of replacement parts.

Replacement parts or kit numbers.

7540-15 std length kit:

7540-16 rebuild kit 2" longer:

Kit includes:

7540-15		7540-16	
Name	Part #	Name	Part#
Bearing	7508	Bearing	7508
Seal	7509	Seal	7509
Shaft	7540-5	Shaft	7540-6
Bearing	7540-14	Wearband	7540-14
AN Wiper	7540-13	AN Wiper	7540-13
Travel ind.	7519	Travel ind.	7519
Gland Oring	12-9090-2-9	Gland Oring	12-9090-2-9
Snap ring	7513	Snap ring	7513

Shaft Length

How to determine shaft length in a slider is done by the measurement below this is called the chrome length of the shaft. Also you can measure the length of the shaft by measuring the shaft sticking out of the slider body, 7540 is 9.250 and the 7540-2 is 10.50 long.

